

## Crane Scale JLG, GS Manual/Simplified operation

JLG, GS



[www.liden-weighing.com](http://www.liden-weighing.com)

## **SIMPLIFIED OPERATION:**

### **Start and weighing without Tare function:**

1. Hang up the scale in a safe way and fastener.
2. Start the scale by pressing the **"ON/OFF"** button.
3. If you have any value in the display beside 0/0,0 press **"ZERO"**.
4. Start weighing.

### **Weighing with tare:**

5. Hang tare on the hook and press **"ZERO"**.
6. Start weighing.

### **"Hold" function :**

7. When stable weight is reached press button **"HOLD"** and the weight value is locked.
8. Press **"HOLD"** again and the scale will go back to normal weighing.

### **Switch between 3000 and 6000 div.**

9. Press **"CHANGE"** to switch between 1/3000 and 1/6000 divisions.

### **All functions is also available on the remote control.**