

LIDÉN BASIC

BXD

Version 1.0 2024-09-04



Förenklat handhavande

Simplified operation

Innehåll

Svenska 4

 Introduktion..... 4

 Användning 4

 Underhåll..... 6

English7

 Introduction.....7

 Use.....7

 Maintenance..... 9

Förenklat handhavande


Svenska

Introduktion

För bästa prestanda och vägningsresultat, iaktta försiktighet i den dagliga användningen och underhållet av din våg.

- Överbelasta **INTE** vågen. Detta skadar lastcellen och gör garantin ogiltig.
- Lämna **INTE** vågen med belastning på under en längre tid. Detta minskar vågens noggrannhet och kan förkorta lastcellens livslängd.
- Försök **INTE** att reparera vågen själv, utan vid problem, kontakta din lokala representant.
- Undvik att utsätta vågen för temperaturskillnader. Placera inte vågen i direkt solljus eller i närheten av kyla.
- Se till att vågen står på stadigt underlag och att den inte utsätts för vibrationer. Om din våg är utrustad med justerbara fötter och vattenpass, justera vid behov.
- Placera inte vågen i närheten av större elektriska apparater, såsom svetsar eller större motorer.
- Undvik att placera vågen i fuktig miljö där kondens kan uppstå. Undvik att utsätta vågen för direkt kontakt med vatten.
- Placera **INTE** vågen i närheten av fönster, dörrar eller fläktar där luftdrag kan påverka vägningsresultatet.
- Håll vågen ren, torka av vid behov med fuktig trasa.
- Se till att använda originaladapter/-laddare och -batteri om vågen är utrustad med det.

Användning

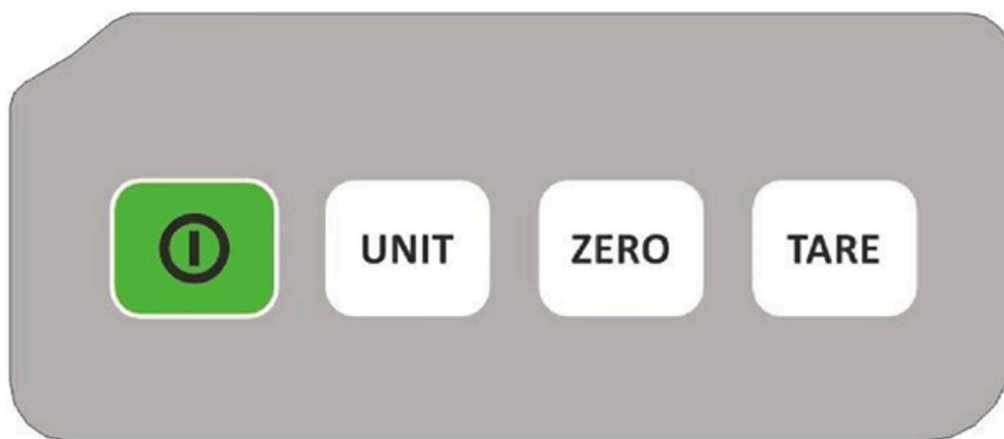

ON/OFF

Starta och stäng av vågen med **ON/OFF**.



UNIT

Välj viktenhet.

Välj mellan **kg, lb, lb oz**.

	ZERO	Nollställning. Om vågen inte visar 0.00 obelastad, tryck ZERO . Upp till 10% av maxkapacitet.
	TARE	För att dra av vikten på ev. behållare, taraintervall är 100% av full kapacitet.
	Indikator för stabil vikt	

Inställning tid automatisk avstängning

1. Tryck och håll ned **ZERO** och tryck sedan på **ON/OFF** för att slå på vågen, displayen visar **A-180**.
2. Tryck på **ZERO** för att välja tid för automatisk avstängning. (**120/180/300** sekunder/**OFF**).
3. Bekräfta med **UNIT**.

Inställning av bakgrundsbelysning

1. Tryck och håll ned **ZERO** och tryck sedan på **ON/OFF** för att starta vågen.
2. Tryck på **UNIT** tills displayen visar **L-Auto**.
3. Tryck på **ZERO** för att välja läge för automatisk bakgrundsbelysning (**På, Av, Stb** eller **Auto**).
4. Bekräfta med **UNIT**.

Inställning HOLD funktion

1. Tryck och håll ned **ZERO** och tryck sedan på **ON/OFF** för att starta vågen.
2. Tryck på **UNIT** tills displayen visar **H-Au**.
3. Tryck på **ZERO** för att välja auto HOLD-läge (**On, Off, Auto**).
4. Bekräfta med **UNIT**.

Om du väger något som inte är stabilt, t ex ett djur, använd auto HOLD-läge, **H-ON**:

1. Starta vågen, placera föremålet för vägning på plattformen.
2. Vänta tills **indikatorn för stabil vikt** visas.
3. Nu kan föremålet tas från plattformen och vikten står kvar på displayen. Genom att trycka på **UNIT** kan du också välja viktenhet (**kg** eller **lb**).
4. Avsluta holdfunktion: Tryck på **TARE** eller **ZERO** för att återgå till normalt vägningsläge. **Indikatorn för stabil vikt** försvinner från displayen.

Vid hold auto nollställs vågen automatiskt när vikten lämnar vågplattformen.

Inställning av ljudsignal

1. Tryck och håll ned **ZERO** och tryck sedan på **ON/OFF** för att starta vågen.
2. Tryck på **UNIT** tills displayen visar **b-ON**.
3. Tryck på **ZERO** för att välja att aktivera eller inaktivera pipsignalen.
b-ON aktiverar pipsignalen.
b-OFF inaktiverar pipsignalen.
4. Bekräfta med **UNIT**.

Inställning Bluetooth (option)

1. Tryck och håll ned **ZERO** och tryck sedan på **ON/OFF** för att starta vågen.
2. Tryck på **UNIT** tills displayen visar **m-xxx**.
3. Tryck på **ZERO** för att välja **OFF, con, co2** och **Stb**.
OFF betyder att Bluetooth-funktionen är inaktiverad.
Con betyder att data matas ut kontinuerligt.
Co2 betyder att data skickas två gånger i sekunden.
Stb betyder att data matas ut när läsningen är stabil (appstöd krävs).
4. Bekräfta med **UNIT**.

Inställning för att välja kommunikationsläge

1. Tryck och håll ned **ZERO** och tryck sedan på **ON/OFF** för att starta vågen.
2. Tryck på **UNIT** tills displayen visar **P-XX**.
3. Tryck på **ZERO** för att välja kommunikationsläge **P-P (0,2,5 11,12)**. Standardval **p-p11** (appstöd krävs).
4. Bekräfta med **UNIT**.

Underhåll

Laddning av batteriet


Typ: 3,7V/2000mAh litium **Antal:** 1



Om symbolen visas i displayen och laddningsindikatorn på sidan av vågen lyser rött behöver batteriet laddas.

Använd den medföljande typ-C laddningskabeln för att ladda batteriet.

Efter 4–6 timmar när indikatorn ändrar färg från rött till grönt är laddningen klar och laddningskabeln kan tas ur.

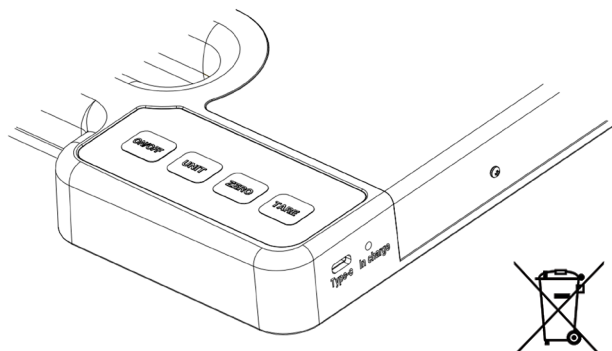

Kontrollrutiner

Egna kontroller kan göras med känd vikt, men är inte nödvändiga.

Kontakta din återförsäljare om frågor uppstår.

Rengöring/desinficering

Vågen får bara rengöras med hushållsrengöringsmedel eller desinficeringsmedel, ex. 70% isopropanollösning.

Vid rengöring av vågens ytor rekommenderas ett desinficeringsmedel som är avsett för våttorkning. Följ tillverkarens anvisningar.

Använd inte poleringsmedel eller starka rengöringsmedel som tex bensin, eftersom de kan skada de ytor som är i plast.

Spruta inte desinficeringsmedlet på vågdisplayen (med tryck)

Desinficeringsmedlet får inte tränga in i vågen.

Felkoder

Om vågen inte fungerar som den ska eller visar felkoder vänligen kontakta din återförsäljare.

Simplified operation


English

Introduction

For the best performance and weighing results, take care in the daily use and maintenance of your scale.

- **DO NOT** overload the scale. This will damage the load cell and void the warranty.
- **DO NOT** leave the scale with a load on it for an extended period. This reduces the accuracy of the scale and may shorten the life of the load cell.
- **DO NOT** try to repair the scale yourself, in case of problems, contact your local representative.
- Avoid exposing the scale to temperature differences. Do not place the scale in direct sunlight or near cold areas
- Make sure that the scale is on a stable surface and that it is not subject to vibrations. If your scale is equipped with adjustable feet and spirit levels, adjust if necessary.
- Do not place the scale near large electrical appliances, such as welders or large motors. Do not leave batteries in the scale if it is not in use for a long time.
- Avoid placing the scale in a humid environment where condensation can occur. Avoid exposing the scale to direct contact with water.
- **DO NOT** place the scale near windows, doors, or fans where drafts can affect the weighing result.
- Keep the scale clean. Wipe, if necessary, with a damp cloth.
- Be sure to use the original adapter/charger and battery if the scale is equipped with it.

Use

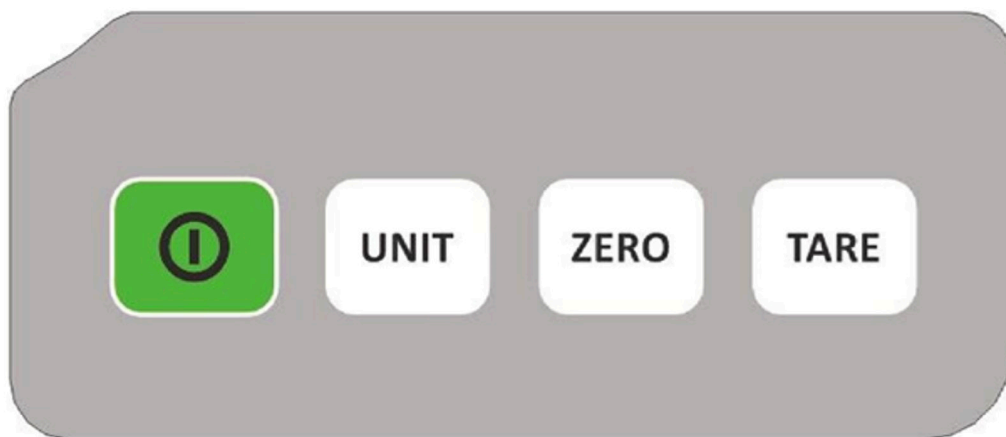

ON/OFF

Power On/Off.



UNIT

Switch weight unit.

Choose between **kg, lb, lb oz.**

	ZERO	Zero key the scale does not show 0.00 unloaded, press ZERO . Up to 10% of max capacity.
	Zero mode on	
	TARE	Tare key To remove the weight of any container, tare range is 100% of full capacity.
	Indicator for stable weight	

Automatic shutdown setting

1. Press and hold **ZERO**, then press **ON/OFF** to turn on the scale, the display will show **A-180**.
2. Press **ZERO** to select auto power off time.
(**120/180/300** seconds/**Off**)
3. Press **UNIT** button to confirm.

Setting for background lighting

1. Press and hold **ZERO**, then press **ON/OFF** to turn on the scale.
2. Press **UNIT** until the display shows **L-Auto**.
3. Press **ZERO** to select the auto backlight mode
(**On, Off, Auto** or **stb**).
4. Press **UNIT** button to confirm.

HOLD function

1. Press and hold **ZERO**, then press **ON/OFF** to turn on the scale.
2. Press **UNIT** until the display shows **H-Au**.
3. Press **ZERO** to select auto hold mode (**On, Off, Auto**).
4. Press **UNIT** button to confirm.

When weighing something unstable, for example an animal, use auto hold mode: **H-ON**:

1. Start the scale, place the item on the weighing platform.
2. Wait for the **stable weight indicator**.
3. The item can now be removed from the weighing platform and the weight remains in the display. Switch between **kg** or **lb** by pressing the **UNIT** button.
4. Cancel hold function: Press **TARE** or **ZERO** to return to normal weighing mode. The **stable weight indicator** symbol disappears from the display.

In auto hold mode the scale will reset automatically when the weight leaves the weighing platform.

Sound signal setting

1. Press and hold **ZERO**, then press **ON/OFF** to turn on the scale.
2. Press **UNIT** until the display shows **b-ON**.
3. Press **ZERO** to turn on or off the beep.
b-ON means enable the beep.
b-OFF means disable the beep.
4. Press **UNIT** button to confirm.

Bluetooth setting (option)

1. Press and hold **ZERO**, then press **ON/OFF** to turn on the scale.
2. Press **UNIT** until the display shows **m-xxx**.
3. Press **ZERO** to select **OFF, con, co2** and **Stb**.
OFF means that the Bluetooth function is disabled.
Con means that data is output continuously.
Co2 means data is sent twice a second.
Stb means that data is output when the reading is stable (app support required).
4. Press **UNIT** button to confirm.

Setting to select communication mode

1. Press and hold **ZERO**, then press **ON/OFF** to turn on the scale.
2. Press **UNIT** until the display shows **P-XX**.
3. Press **ZERO** to select communication mode **P-P (0,2,5 11,12)**. Default selection **p-p11** (app support required).
4. Press **UNIT** button to confirm.

Maintenance

Charging the battery


Type: 3,7V/2000mAh lithium **Quantity:** 1



Note that if this symbol appears in the display and the charging indicator on the side of the scale lights up red the battery needs to be charged.

Use the supplied type-C charging cable to charge the battery.

After 4-6 hours, when the indicator changes from red to green, charging is complete, and the charging cable can be removed.

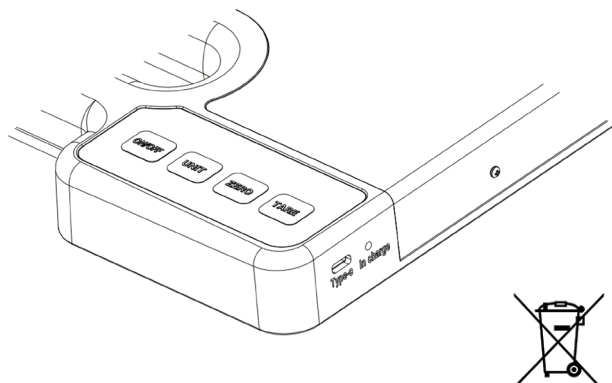

Control routines

Own checks can be made with known weights but are not necessary.

Contact your dealer if questions arise.

Cleaning / Disinfection

For all maintenance with the scale, the power supply must be disconnected.

The scale may only be cleaned with household cleaners or disinfectants, e.g. 70% isopropanol solution.

For cleaning the surfaces of the scale we recommend a disinfectant that is intended for cleaning by damp cloth. Follow the manufacturer's instructions.

Do not use polishing agents or strong cleaning agents such as petrol, as they can damage the plastic surfaces.

Do not spray the disinfectant on the scale display (with pressure).

The disinfectant must not penetrate the scale.

Error codes

If the scale does not work as it should or displays error codes, please contact your dealer.



liden-weighing.se | info@liden-weighing.se
Lidén Weighing AB | Sandbergsvägen 3B | 441 39 Alingsås | 0322-442 00